

### USER GUIDE





# Halo One better in one



### What's in the box



#### Halo One unit







### User Guide Manual

### AUX Connection Cable DC Power Charging Adapter



### Switch On/Switch Off



### Slide up to switch on

## to switch off

### Switch On: Slide up to switch on Halo One and the white LED will start blinking after bleep.

Switch Off: Touch and hold for 3-5 seconds, then the white LED light will be off after bleep.



### **Connecting via Bluetooth**



Activate your device's Bluetooth feature and select 'Halo One' to start the connection. A beep Will sound and the white LED light will stay on to indicate a successful sync/connection.

### Note: Only one Bluetooth device can be synced with Halo One at a time.







To switch to another Bluetooth device connection, touch and hold the reset icon for 3 seconds. The current device will be disconnected and the LED light will blink, freeing Halo One to be synced with another Bluetooth device.



## Connecting via NFC





## Turn on your NFC-capable device's NFC feature, and gently tap the side of Halo One marked with the NFC icon. A beep will sound and the LED light will stay on to indicate a successful connection

Note: Some NFC-capable devices may not be compatible with Halo One. In this instance, it's advised to connect via Bluetooth or the AUX connection.



## **Connecting via AUX connection**









### Plug the supplied AUX connection cable into your audio device and the Halo One's AUX IN jack. Bluetooth or NFC connection function must be disabled first when connecting this way.



## Charging the Halo One





#### Use the supplied DC Power Adapter when your Halo One is low on power.

When charging the Halo One, a red LED light will glow and once the unit is fully charged, the glow will automatically disappear.



## Volume Adjustment





















Adjust the volume by sliding your finger on the touch control panel at the back of the Halo One. Slide up to turn on the volume and slide down to turn it down. The volume can also be adjusted through your device when it's connected by Bluetooth or NFC.



### FAGS

Q: How many hours does the Halo One battery last when playing

#### A: The Halo One's battery lasts for about 2-3 hours of constant play.

## Q: What is the purpose of the reset button? A: The reset button allows you to sync the Halo One to another Bluetooth device without shutting off. Once the reset button is pressed, Halo One will disconnect with the current synced device automatically and allow you to switch to connect with a different device quicker.



Please follow the below safety instruction properly; failure to do so may result in unexpected serious Damage or malfunction.

1. Avoid dropping the unit or any other heavy hit may damage the unit. Avoid prolonged exposure to the sun or rain.

2. Keep this device in a clean and dry environment with temperatures not exceeding 40 Celsius degree. To avoid corrosion, ensure the unit's ambient humidity does not exceed 75%. Do not expose this unit to any heat source.

3. Do not plug the DC Power Adapter into the AUX IN jack as this may seriously damage this unit.

4. Do not dispose this unit or any electronic waste in a regular trash bin. Dispose any electrical Waste separately and properly.

5. Do not disassemble this unit without manufacturer's approval as this will may seriously damage this unit and void your warranty.

6. Any damage caused by non-compliance with the safety instructions renders Gingko Electronics Ltd free of any liability.



#### This product comes with one-year warranty from the date of purchase.

#### Within the warranty period, repair services and/or component replacements are free of charge

if damages result under normal use by following the instructions. Warranty is void should the unit be damaged or malfunction due to misuse, improper handling Or by events or circumstances beyond the control of Gingko Electronics Ltd

Warranty is void if: 1. The unit improperly used, altered, modified, not properly installed or disassembled.

2. Safety instructions in this manual are not followed.

3. Damage or malfunction is caused by natural calamities such as fire, flood, or earthquake.

This product may still be serviced when out of the warranty period with applicable charges. To know more, please contact the manufacturer Gingko Electronics Ltd or visit its website at www.ging-ko.co.uk.

### All rights are registered and protected

## Copyright © Gingko Electronics Ltd

www.ging-ko.co.uk

Alle Rechte sind eingetragen und geschützt Todos los derechos están registrados y protegidos

版权保护, 违者必究

support@ging-ko.co.uk

